

Installing Rinato™ boards to the flat side of the joist



Fixing your composite deck boards to Outdoor QwickBuild subframe with concealed decking clips

Fixing using traditional clips

- Ensure joist is flat, face up (green), with the recessed side down.
- Fix clips to beams with specialised fixing screws (76SS4212DB), using existing seam lines to ensure precision, then slot in next board in run.
- Repeat process until run complete.


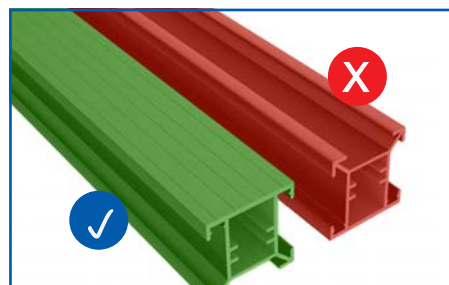


Image shows joist being used flat side up.



Application of starter clip on flat side of joist.

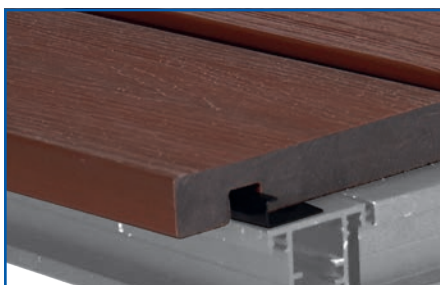

Application of double clip on flat side of joist.

Concealed fixings available:

Rinato™ Starter Clip

Hidden fixing for the starting deck board



Rinato™ starter clips provide a concealed starting point for your run of composite boards (suitable for boards with 8mm groove lip). Stainless steel, powder coated. Supplied in packs of 10.

Rinato™ Double Clip

Hidden fixing to secure deck boards to joists



Stainless steel, powder coated double clips allow you to install the composite boards with 1mm board spacing (suitable for boards with 8mm groove lip). Supplied in a pack of 50, with 50 screws to fix directly into joists.

4.2 x 12mm Screws

For fixing starter and double clips to the joists



4.2mm x 12mm galvanised screws for use with Rinato board clips on QwickBuild subframe. BZP – Dacromet Black finish. Supplied in pack of 100.

Whilst every effort has been made to ensure the accuracy of the information supplied. F.H.Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H.Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.