

## COMBINATION KEYPAD ON ONE SIDE

- Easy to fit - Slim 70mm ( $2\frac{3}{4}$ ") wide lock case along with adjustable and removable latchbolt ensure easy fitting to gates
- Secure - The latchbolt moves 15mm ( $\frac{5}{8}$ ") ensuring the bolt enters deep into the gate post
- Durable - The latchbolt is supported on the edge of the gatepost to reduce friction and wear
- Easy to change handing - Handing can be changed on site if required!
- This lock has a keypad on one side, handle on the other
- Anti-corrosion thanks to the stainless steel construction


## PRODUCT DETAILS

Product code:	Description:
<b>05SGCH30L</b>	<b>Digital Gate Lock - Keypad One side Flat Bar/Box section up to 30mm - L/H</b>
<b>05SGCH40L</b>	<b>Digital Gate Lock - Keypad One side 40 to 60mm Box Section - L/H</b>



## INSTALLATION

1. Drill 2 x 9mm ( $\frac{3}{8}$ ") holes at 140mm ( $5\frac{1}{2}$ ") centres for fixing bolts provided.
2. Drill a 18mm ( $\frac{3}{4}$ ") clearance hole for the latchbolt at 60mm ( $2\frac{3}{8}$ ") centres up from the bottom fixing hole.
3. Hold the lock against the back of the box section and screw on the latchbolt through the larger hole.
4. Lock the latchbolt with the hex key supplied by inserting the hex key into the end of the latchbolt.
5. Fix lock in place using the stainless steel bolt support plate and the countersunk screws provided. Ensure the latchbolt moves freely.
6. Fix strike plate by either welding or screw fixing onto the gate post.
7. **MAINTENANCE** Every 6 months, lubricate the latchbolt with light oil. Annually, dismantle the lock and spray mechanism with light oil.

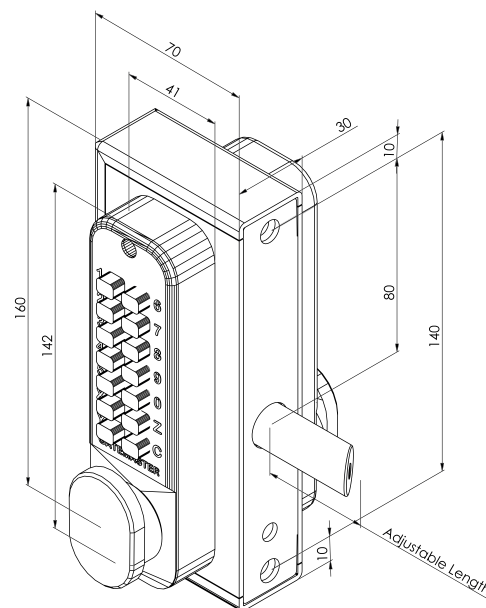


## COMBINATION KEYPAD ON ONE SIDE

### LOCK CODE:

**C** \_ \_ \_ \_ \_

### TO CHANGE THE CODE

1. Check the original code is working on the keypad.
2. Remove the keypad off the lock. To do this, slide the keypads and lock insides out of the case spine and unscrew the two screws fixing the keypad to the panel.
3. Turn the keypad over and remove the 4 screws.
4. Lift off the covering panel carefully as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
5. To change the code hold the keypad with the code buttons down and depress & hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'.

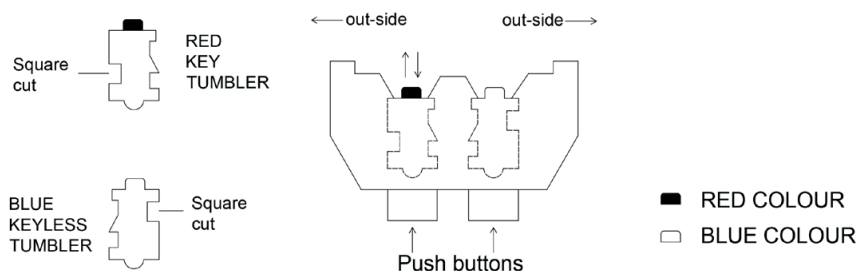

6. Replace the covering panel and tighten the 2 screws.
7. The code is now changed, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the panel using the 2 screws and reassemble the lock.

### 3 MONTHLY MAINTENANCE

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.

Whilst every effort has been made to ensure the accuracy of the information supplied. F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.